



Instruction manual

Car-Cradle for aiShell mini / aiShell mini+ / aiShell Air

ArtNr: 290040

Content:

- 1x Car-Cradle Top
- 1x Car-Cradle Base
- 1x Car-Cradle Connector
- 4x Screws
ISO 4762 - M4x20
- 2x Allen key
SW2 + SW3
- 4x Locknuts
DIN 985 - M4
- 4x Washers
DIN 125 - 4.3 (M4)
- 2x Screws
DIN 912 - M3x6
- 2x Lockwashers
DIN 6797 I - 3.2 (M3)
- 1x O-Ring
6 x 1.2 mm



Preparation:

The two parts of the Car-Cradle have to be attached to each other or additionally to a RAM-Mount (RAM-202u, not provided) with the provided screws, washers and locknuts. For the use with an aiShell mini or mini+ use the four upper bores of the Car-Cradle top and for the use with an aiShell Air use the four lower bores.

Realization:

1. Put the iPad into the proper aiShell according to the manual provided with the case.
2. Open the lower rubber plug to get access to the loading port.
3. Check the o-ring that is fitted around the Lightning plug of the Car-Cradle Connector, plug it in and screw it to the case until it sits in place without moving.
4. Connect the Car-Cradle to a battery charger (5,0-5,2V / 2,0 – 2,5A) that is certified for the Apple iPad (MFI) you are using. Therefore use the USB plug.
5. Place the aiShell in the Car-Cradle with the Connector going in first until the aiShell snaps into the Car-Cradle
6. To remove the aiShell push the upper snap-fit upwards with your thumb and pull out the aiShell with an upward movement.

ATTENTION!

Before the iPad can be removed from the aiShell the Connector HAS TO BE removed. Afterwards for the removal of the iPad follow the steps described in the aiShell manual vice versa. If you try to remove the iPad with the Connector attached to the aiShell the Connector will be damaged!

Instruction manual

Car-Cradle-Pro for aiShell Pro

ArtNr: 291085 / 291086

Inhalt:

- 1x Car-Cradle Top
- 1x Car-Cradle Base
- 1x Car-Cradle Mid
- 1x Car-Cradle Connector
- 4x Screws
ISO 7380 - M4x8
- 4x Screws
ISO 7380 - M4x18
- 1x Allen key
SW 2.5
- 4x Locknuts
DIN 985 - M4
- 2x Screws
DIN 912 - M3x6
- 2x Lockwashers
DIN 6797 I - 3.2 (M3)
- 1x O-Ring
6 x 1.2 mm



Preparation:

The three parts of the Car-Cradle have to be attached to each other or additionally to a RAM-Mount (RAM-202u, not provided) with the provided screws, washers and locknuts.

The Car-Cradle top and the Car-Cradle base are placed against each other on top of the Car-Cradle mid that the outer contours and screw holes coincide. The M4x8 screws are used for the two upper holes (on Car-Cradle top) and the two lower holes (on Car-Cradle base). For the four remaining middle holes of the Car-Cradle corresponding the M4x18 screws.

Realization:

1. Put the iPad into the proper aiShell according to the manual provided with the case.
2. Open the lower rubber plug to get access to the loading part.
3. Check the o-ring that is fitted around the Lightning plug of the Car-Cradle Connector, plug it in and screw it to the case until it sits in place without moving.
4. Connect the Car-Cradle to a battery charger (5,0-5,2V / 2,0 – 2,5A) that is certified for the Apple iPad (MFI) you are using. Therefore use the USB plug.
5. Place the aiShell in the Car-Cradle with the Connector going in first until the aiShell snaps into the Car-Cradle.
6. To remove the aiShell push the upper snap-fit upwards with your thumb and pull out the aiShell with an upward movement.

ATTENTION!

Before the iPad can be removed from the aiShell the Connector HAS TO BE removed. Afterwards for the removal of the iPad follow the steps described in the aiShell manual vice versa. If you try to remove the iPad with the Connector attached to the aiShell the Connector will be damaged!