BOXit DESIGN

Assembly instructions

Slim System™ Wall and Desk Mounting Kit

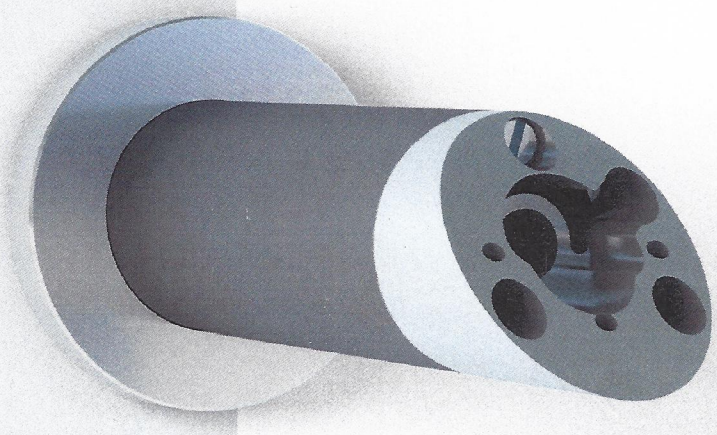

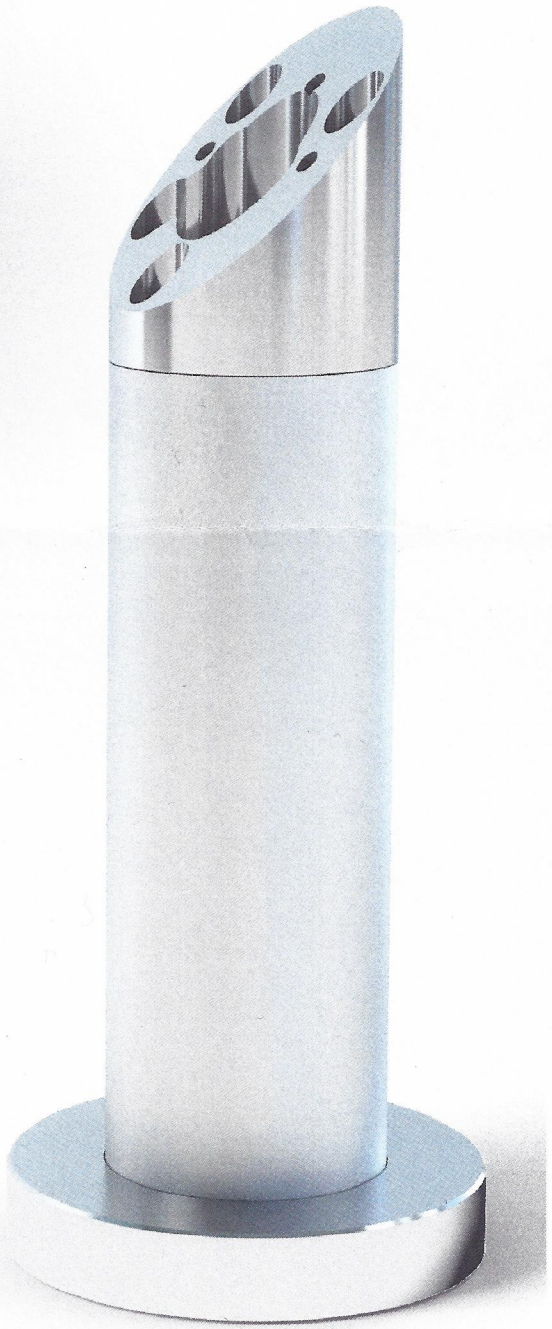

29/05/17

BOX it DESIGN

Parts and Tools included

TX30 Bit

3 x M6

1 x M3 Pinol Screw

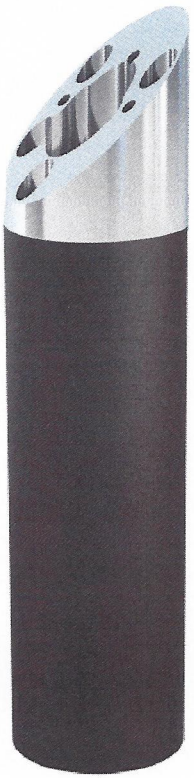

Slim Tube with Top Mount

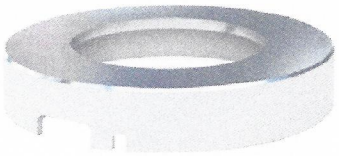

Deko Collar

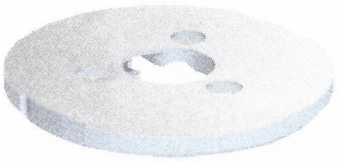

Wall and Desk Mount

BOX it DESIGN

Fix the Wall and Desk Mounting Kit to the Slim Tube

A

Turn the Slim Tube upside down.
Use three M6 Screws to attach the Wall and Desk Mount to the bottom of the Slim Tube.

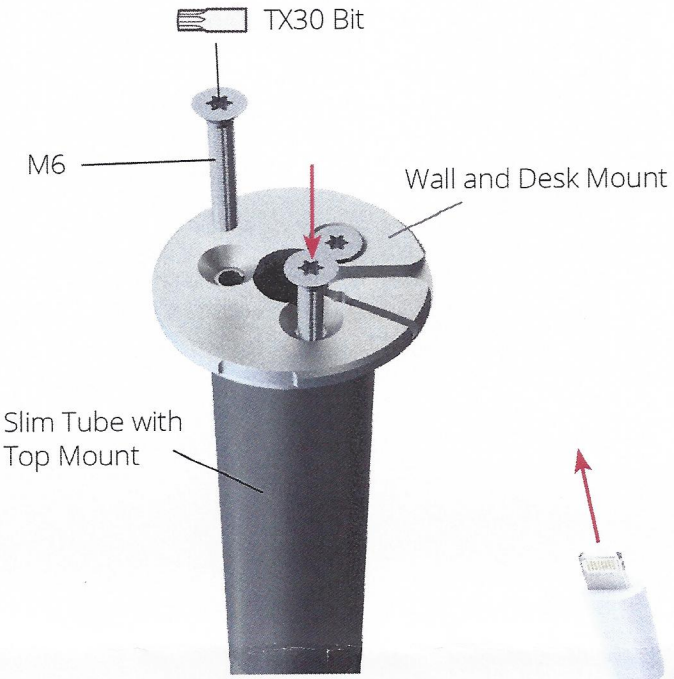

B

OPTIONAL: If using a Charge Cable, pull it through the Top Mount and Slim Tube. The Cable can either be extracted through the desk or wall or run alongside the wall or desk surface.

Pull 16-20 cm of the Charge Cable out of the Top Mount.

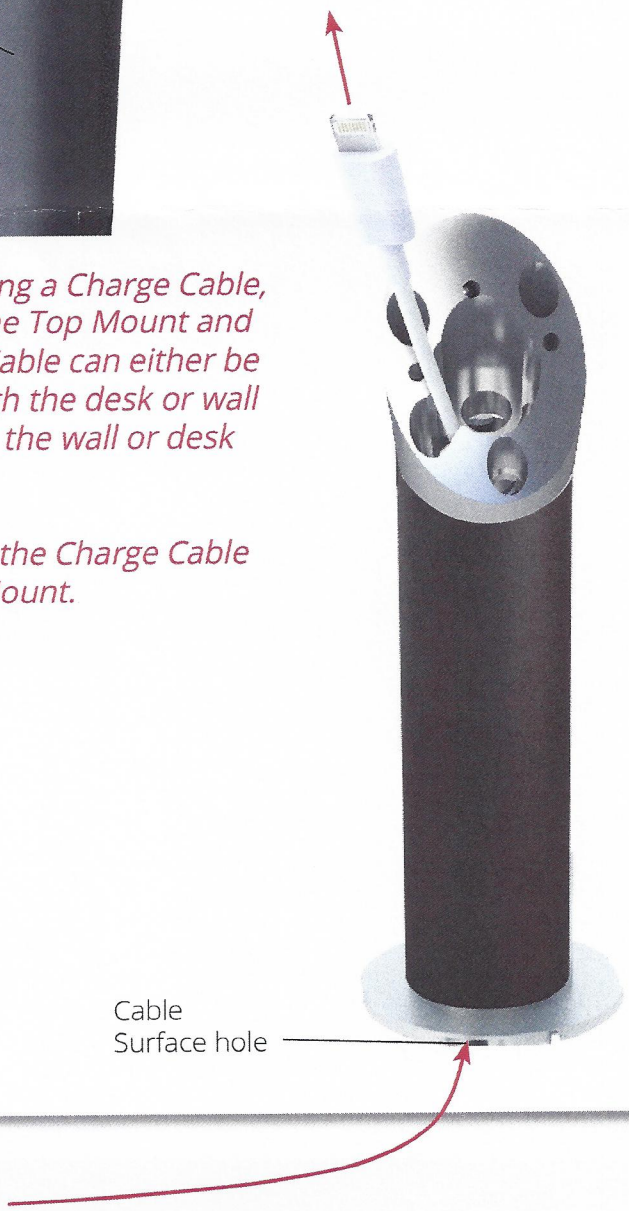

BOX it DESIGN

Fix the Wall and Desk Mounting Kit to the Surface

C

If using a Charge Cable and it should run alongside a wall or desk surface:
Place the Wall and Desk Mount and it's Cable Groove facing the desired direction.

Use the proper screws or bolts to mount it to the surface (not included)

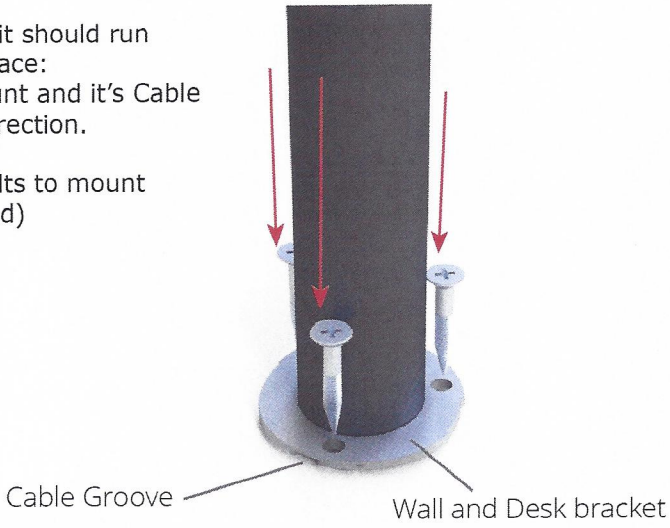

D

Slide the Deco Collar onto the Slim Tube.
Be careful not to scratch the Tube.

Turn it until the Pinol Hole is aligned with the Hole in the Wall and Desk Mount.

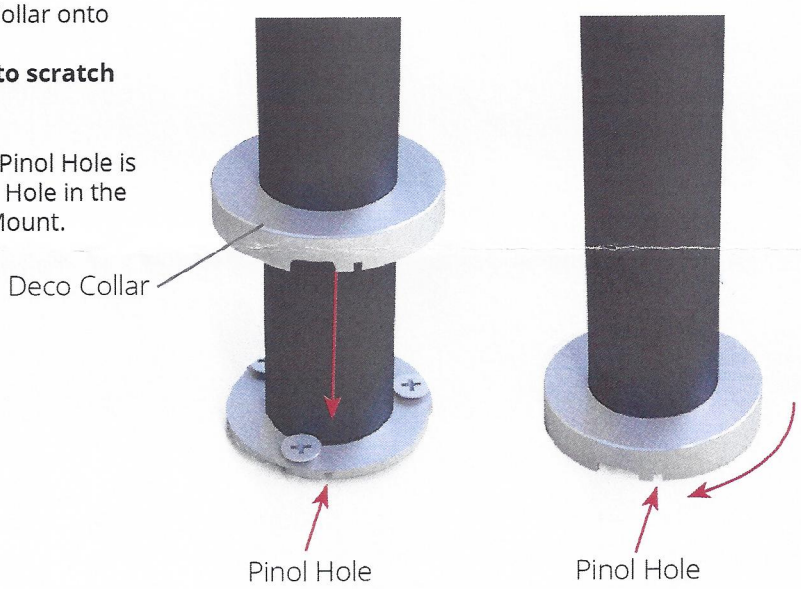

E
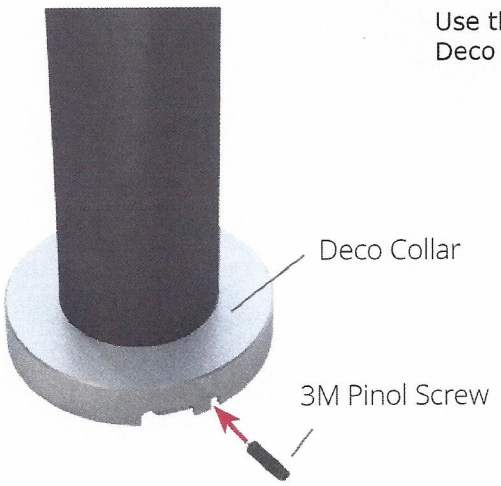
Use the M3 Pinol Screw to secure the Deco Collar to the Wall and Desk Mount.